



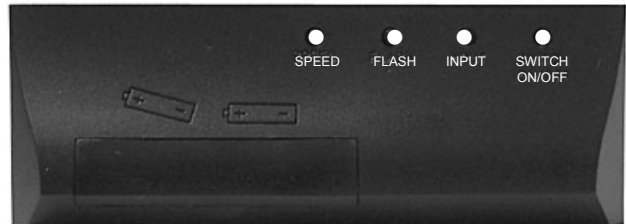

Desktop Messenger™

On-Board Programming Operating Instructions

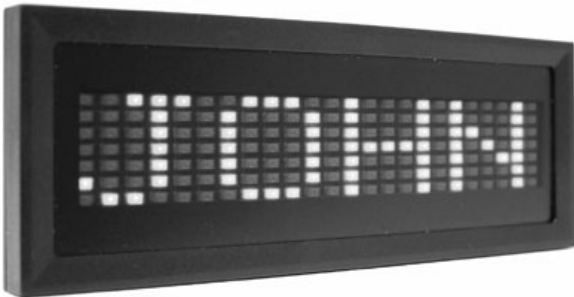

NATURAL DISPLAY STATE

ON/OFF

When the battery is inserted the LED Badge will turn on and a welcome message will be displayed. To turn the badge OFF, press the switch button for 2.5 seconds. To turn the badge ON, press the switch button once.

SWITCH – Select the message to be displayed (1-16)

The LED Badge can store up to 16 messages. Press the Switch button once to view the next message. Continue until the message you wish to display is showing.

SPEED - Adjust speed of the LED Badge

The badge has 8 different display speeds (7 Extremely Fast- 0 Stopped). Press the Speed button once to change speed. Repeat as required.

FLASH - Adjust flash frequency of the LED Badge

The badge has 8 different display Flash frequencies (7 Extremely Fast- 0 None). Press the flash button once to change the flash frequency. Repeat as required.

EDIT STATE

INPUT - Enter the text editing functions

Speed - Edit button

Flash - Edit button

Input - Enter the text editing functions

Switch - Multifunctional button

Changing the Message Text: Press the INPUT button once to enter the edit function. The first character will show on the right and can be changed by using the SPEED and FLASH buttons.

To select the next character press the INPUT button and select another character with the SPEED or FLASH buttons. Repeat until the required message is complete.

Wait 10 seconds or press the INPUT button for 3 seconds and the message will automatically change. The message being displayed is now your new choice.

Skip A Space: Press the SWITCH button once.

Delete a character: Press the SWITCH button for 3 seconds to delete a character.

Shift between small and large caps: Press the Speed button for 3 seconds.

Pro-Lite Technical Support: Website: www.pro-lite.com/support Email: support@pro-lite.com